
RINCONPOWER™
Products For An Electrified Future

RXC35 SERIES

High Voltage Contactors

350A+ CONTINUOUS DUTY

1000Vdc SYSTEM VOLTAGE

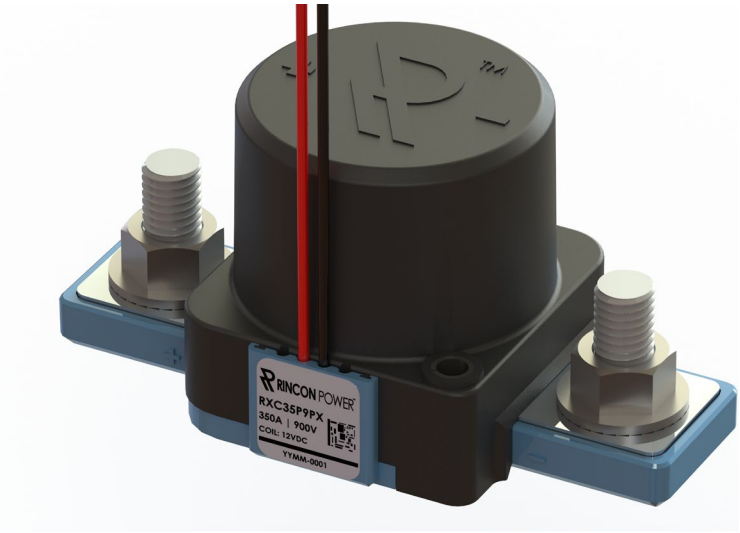

FEATURES

SPST Normally Open High Voltage Contactors

- Hermetic seal with gas fill
- Optional auxiliary contacts – for main position feedback
- High temperature performance
- Meets RoHS 2011/65/EU
- Designed and Assembled in US



PERFORMANCE

TABLE 1. SPECIFICATIONS		
CHARACTERISTIC	**MEASURE**	
Contact Arrangement	Form X, SPST NO	
Max Switching Voltage[2]	1,000 VDC	
Dielectric Withstand Voltage (Between Open Contacts and Coil)	2200 VRMS (60 sec)	
(Between Contacts and Coil)	2200 VRMS (60 sec)	
Continuous Current (107mm^2 conductor)[5]	350A	
Overload Current 1 minute	850A	
10 minutes	450A	
Make and Break	See table	
Max Short Circuit Current - 20ms	3500 A	
Min Insulation Resistance	100 MΩ @ 1,000V	
Contact Resistance (Max) measured at 200A	0.3 mΩ	
(Typical) measured at 200A	0.15-.25 mΩ	
Operate Time (Max, incl bounce)	25ms	
Release Time (Max)	10ms	
Shock - Functional, 1/2 Sine, 11ms	20G	
Shock - Destructive, 1/2 Sine, 11ms	50G	
Operating Temperature	-45˚C to 100˚C (175˚C Max Terminal Temperature)	
Ingress Protection	Exceeds IP69, (Hermetically Sealed)	
Mechanical life	300,000	
AUXILIARY CONTACTS	**MEASURE**	
Contact Arrangement	SPST	
Continuous Current	2A	
Minimum Current	5mA @ 8V	
ECONOMIZED DUAL COIL (20°C)	**MEASURE**	
Nominal Voltage	12V	24V
Max Voltage	16 VDC	32 VDC
Pick-up Voltage (Max)[3]	7.5 VDC	15.0 VDC
Drop-out Voltage (Min)	0.6 VDC	1.2 VDC
Pull-in current (max 300ms)	4.3A	1.6A
Holding Current	0.24A	0.09A
Coil Power (pull-in)	46W	38W
Coil Power (Holding)	2.9W	2.2W
Coil Back EMF (V) via internal TVS	150V	150V

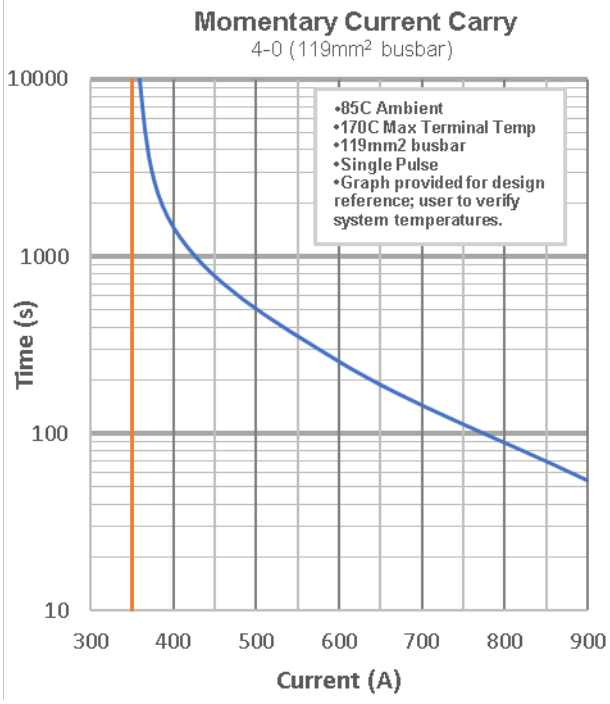


TABLE 2. RESISTIVE LOAD SWITCHING (MAKE / BREAK DATA)		
POLARITY SENSITIVE VERSION		**CYCLES** (1 cycle = 1 make + 1 break)
VOLTAGE	**CURRENT**	
450V	350A	2500
800V	300A	1500 BREAK only
750V	400A	500
320V	-300A	12
750V	50A	20,000
450V	100A	50,000
1000V	350A	300 (BREAK Only)


OPTIONS


TABLE 3. PRODUCT NOMENCLATURE

	CONTACT POLARITY	MOUNTING	COIL	AUXILIARY CONTACTS
RXC35	P Polarity Sensitive	3 PCB Mount	P 12V dual coil (economized)	A Normally Open
		9 Chassis Mount	Q 24V dual coil (economized)	B Normally Closed
				X None

PRODUCT DIMENSIONS [mm]

Mounting Option 3 – PCB Mount

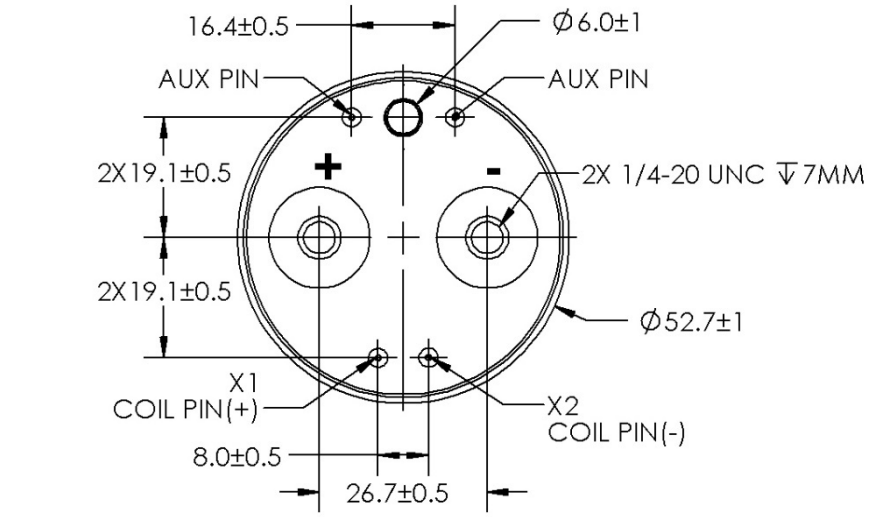

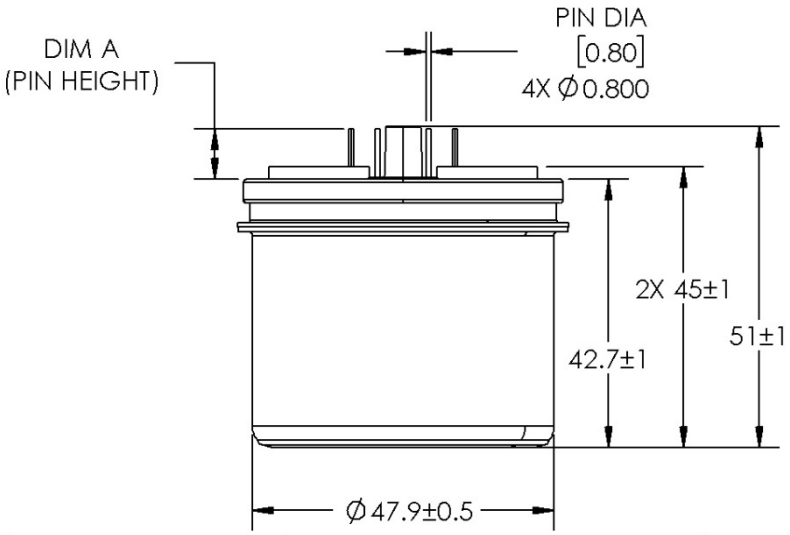

DIM A (PIN HEIGHT)	CONFIGURATION
4X 8.5 mm ±0.5 mm	WITH AUX CONTACTS (A, OR B)
2X 11.2 mm ±0.5 mm	WITHOUT AUX CONTACTS (X)

TABLE 4. DIMENSIONAL AND INSTALLATION PCB Mount

CHARACTERISTIC	MEASURE
Weight	290g (0.64 lb)
Coil Wire	N/A
Mounting Inserts	N/A
Mounting Position	Any / Not Position Sensitive
Package Quantity	TBD
Install Torque 1/4" – 20 Main Terminals	7 Nm 7mm thread engagement



Mounting Option 9 – Chassis Mount



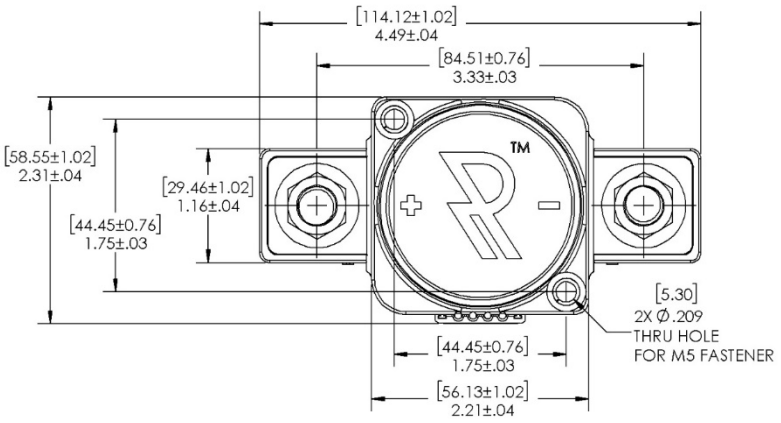


TABLE 5. DIMENSIONAL AND INSTALLATION	
CHARACTERISTIC	**MEASURE**
Weight	490g (1.1 lb)
Mounting Inserts	M5
Mounting Position	Any / Not Position Sensitive
Package Quantity	20 pcs
Install Torque M10 x 1.5 Main Terminals	125-150 in-lb. [14-20Nm]
COIL / AUX WIRE	**FUNCTION**
Black	Coil GND (-)
Red	Coil POS (+)
Grey	Aux COM
Blue	Aux N.O.
Orange	Aux N.C.
Lead Wire Length	15 in [38cm]
Lead Wire Size	20AWG, Stranded
Jacket Material	PVC
UL Ratings	UL 1007, UL 1569

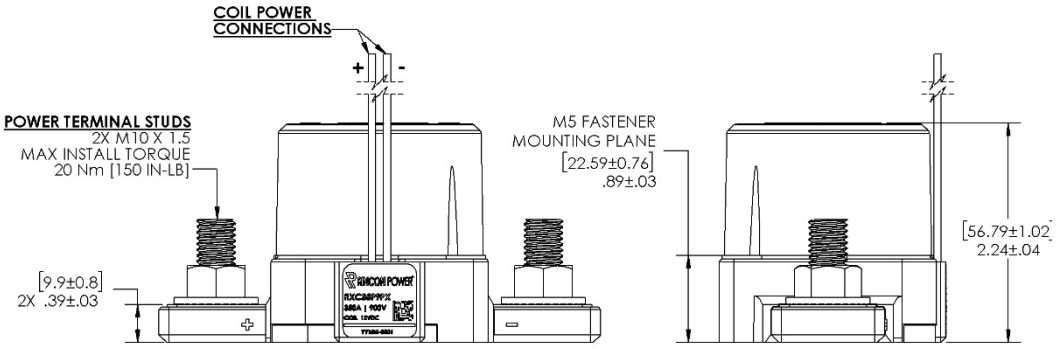

Power Contacts

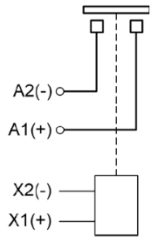

- 3D model available upon request

NOTES

1. Attach cables and busbars directly to the main terminal pad using the recommended install torque. Do not use washers or other materials between the contactor power terminals and the conductor.
2. Contactor may be used above Max Switching Voltage if the application does not require significant load breaking. Please contact Rincon Power for more details.
3. Dual coil economizer design: Pickup Voltage must be applied as a pulse. Do not ramp voltage.
4. Integrated coil suppression limits back EMF to 150V.
5. Rigid busbar structures have the potential to induce stress into the device and can damage the hermetic seal. When using busbars, it is important to design compliance into the bus bar structure via the use of flexible laminated busbars and or by means of incorporating adjustability in adjacent bolted interfaces.
6. Polarity Sensitive versions are marked + and - for the power terminals. For applications that require the contactor to switch under load, please ensure current is flowing from the + to the - terminal when breaking/opening under load For Bi-Directional versions the direction of current does not matter when breaking under load.

Legal Disclaimer Notice for Rincon Power, LLC Datasheet

This legal disclaimer applies to purchasers and users of products manufactured by or on behalf of Rincon Power, LLC ("Rincon"). Unless otherwise expressly indicated in writing, Rincon's products, product specifications and data sheets relating thereto are subject to change without notice. Users should check for and obtain the latest revision information and verify that such information is current and complete before placing orders for Rincon's products. Users should always verify the actual performance of the Rincon's products in their specific systems and applications.

Except as expressly set forth in the relevant purchaser order terms and conditions or applicable agreement, Rincon makes no warranty, representation or guarantee regarding the products, expressed or implied, including, but not limited to, a warranty of merchantability or fitness for a particular purpose. To the maximum extent permitted by applicable law, Rincon disclaims (i) any and all liability arising out of the application or use of any product, (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.

In no event shall Rincon be liable for any incidental or consequential damages resulting from the use, misuse or inability to use the product. This exclusion applies regardless of whether such damages are sought based on breach of warranty, breach of contract, negligence, strict liability in tort, or any other legal theory.